
LRV Hydraulic Elevator

Spare Parts Leaflet

C-3000

January 11, 2012 / Page 1 of 25

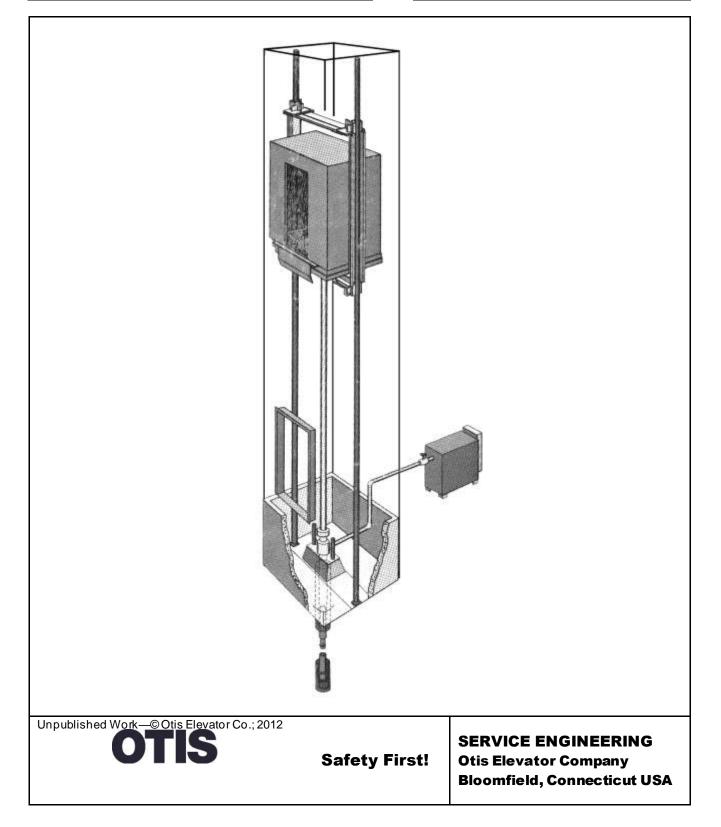

Leaflet Description

This leaflet lists parts used on the first generation LRV hydraulic elevators.

Leaflet Revisions

Date Revised	Subject Matter Expert	Reason for Revision
February 10, 1982	Jeffrey S. Costley, Senior Technical Writer	New SPL
March 23, 2011	Matt Fournier	Added history page; added alternate part number for P613AP9.
May 18, 2011	Joe Zych	Add missing notes. Update notes.
January 11, 2011	Matt Fournier	Updated relay information on p. 8.

Related Drawings

Drawing No.	Title	Drawing No.	Title

Related Documents

Document ID	Title
TIP 1.2.0-38	P613AP6, 7, and 9 Aromat Relay Replacements

Subject Matter Expert

Name	Department	
Matt Fournier	OSC Service Engineering	

About Spare Parts Leaflets...

This document lists the lowest replaceable units (LRUs) for the standard version of the product. The LRUs are chosen by a team of Otis associates representing engineering and manufacturing.


While goal of this document is to make parts identification as easy as possible, the document cannot be allinclusive. Elevator and escalator contracts classified as "special" or "custom" are not addressed here. For such contracts, please refer to specified information, the contract folder, TIPs, Field Education Articles, Construction Letters, etc. for further information.


If you have any suggestions about this document, please contact the subject matter expert listed on this page.

Page 2 **January 11, 2012**



2

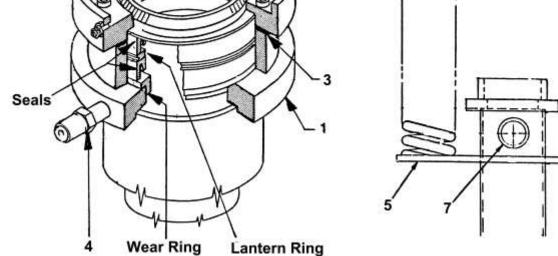

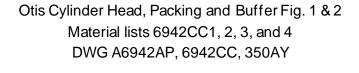

Wiper

	PART No. Plunger Size		
REF. No.	3-7/8 in.	4 in.	DESCRIPTION
1	A390BH1	A390BH9	Cylinder Head
2	386BDG1	386BDG6	Clamp Plate
3	376FJ1		Gasket
	AAA6942FT1	AAA6942FT11	Packing Kit. Includes: wiper, seals (2), Lantern Ring, and Wear Ring
4	PLUG HANSEN-CAT-2-K16 377DR2		Hansen 1/4 Two-Way Shut Off Plug
5	386BPR1	386BPR2	Plate
6	90RD12		Spring
7	CPG STD2		Coupling

C-3000


	1- 4- 2- 5- 6- 3- 8-		Wiper Ring Viper Ring Viper Ring Viper Ring Seal Viper Ring Kear Ring Head Assembly Fig. 3 LJ-387, LJ-400
		T No. er Size	
REF. No.	3-7/8 in.	4 in.	DESCRIPTION
	A-9330A	A-9339A	Head Assembly with:
1	A-933a	A-9340	Head
2	A-9333	A-9333	Clamp Ring
3	A-9221	A-9221	Flange
4	A-9089	A-9089	Plug
5	A-9246	A-9246	Set Screw
6	A-9247	A-9247	Ball, St. Steel
	AAA6942GT1	AAA6942GT2	Packing Kit. Includes: wiper, seals (2), Lantern Ring, and Wear Ring
7	A-452	A-452	O-Ring
8	A-9332	A-9341	Insert Ring

NOTE:Replacement parts designated by A-____ available from Elevator Equipment Corporation, 4035 Goodwin Ave., Los Angeles, CA 90039 (323) 245-0147

 Page 4
 January 11, 2012

Type 7070AH Machine

C-3000

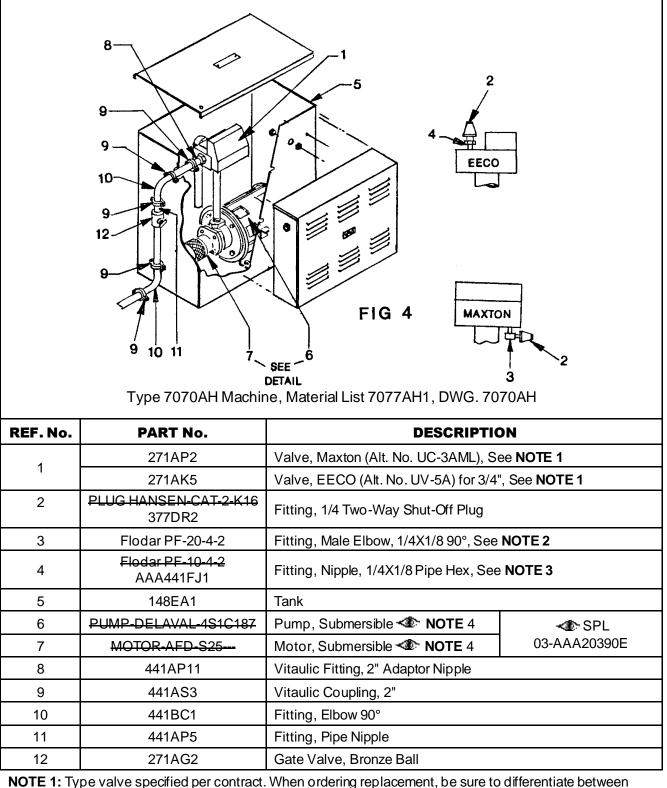


EEC4 and Maxton. With Maxton specify Serial No. stamped on valve (i.e., 3-82-1111-V).

- **NOTE 2:** For use with Maxton valve or equivalent fitting.
- **NOTE 3:** For use with EECO valve or equivalent fitting.
- **NOTE 4:** To ensure proper fit between pump and motor, verify shaft and mounting hole dimensions. If unsure, replace both pump and motor.

January 11, 2012 | Page 5

HVL Controller

	ig.8	Mater	introller Fig. 7 introller Fig. 7 introller Jacobi		
REF. No.	PART No.	QTY	DESCRIPTION		
1	7151Y1	1	Starter, 200–240 V		
1	7151W1	1	Magnetic Starter, 440–600 V		
2	235CC2	1	Transformer, 200–240 V		
2	235CP1	1	Transformer, 440–480 V		
2	235CP2	1	Transformer, 500–600 V		
3	P232BJ2	3	Resistor, 250 Ohms		
4	P232BJ3	1	Resistor, 1000 Ohms		
5	P180BP2	1	Fuse Holder		
6	P180BP1	1	Fuse Holder		
7	P375AS1	2	Fuse		
8	P375AT1	2	Fuse, 200–250 V		
8	P375AT2	2	Fuse, 250–600 V		

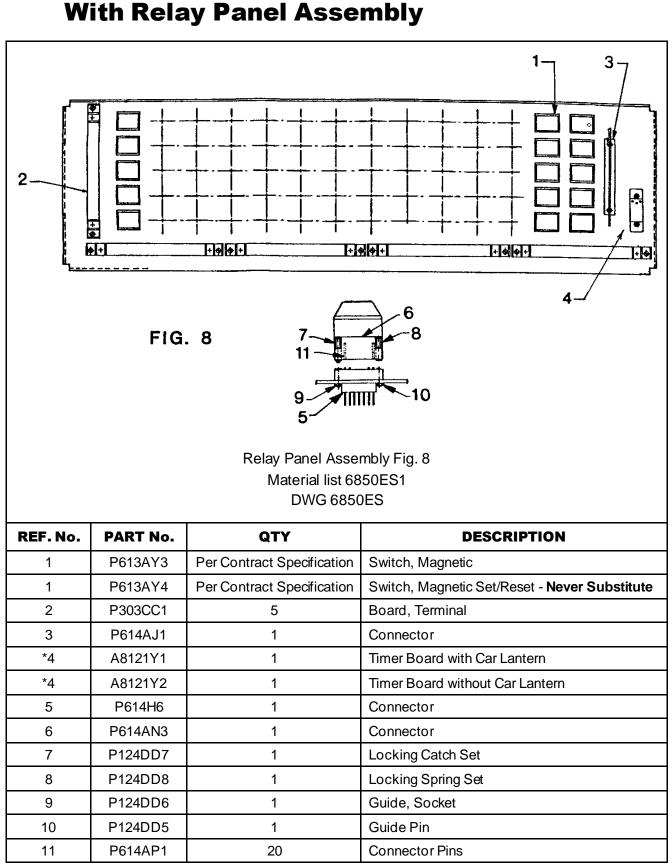

HVL Controller


* General location, parts not illustrated.

C-3000



HVL Controller With Door

Operator Shelf Assembly

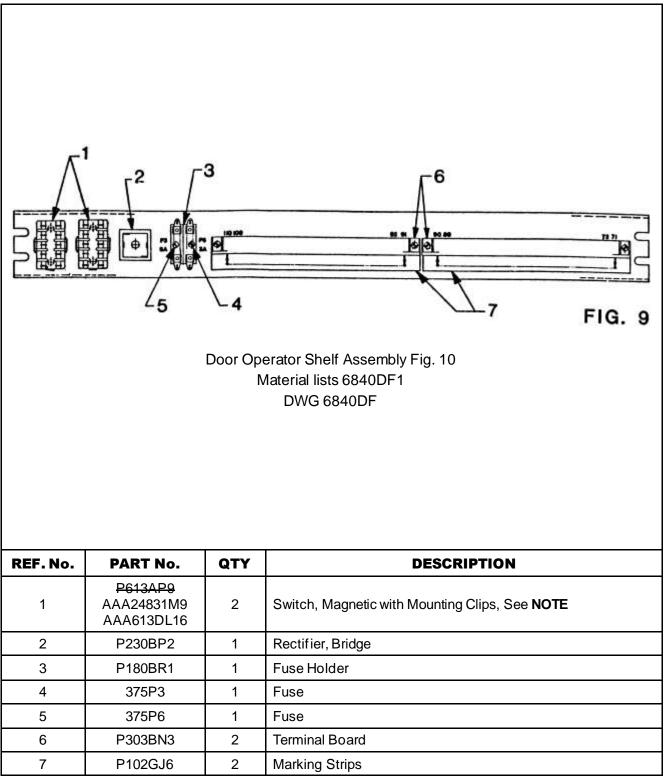


NOTE: For first time replacement, order AAA24831M_; for subsequent replacements, order AAA613DL_. Refer to TIP 1.2.0-38, *P613AP6, 7 and 9 Aromat Relay Replacements*, for replacement options.

Page 8 **January 11, 2012**

Top of Car Junction Box

C-3000

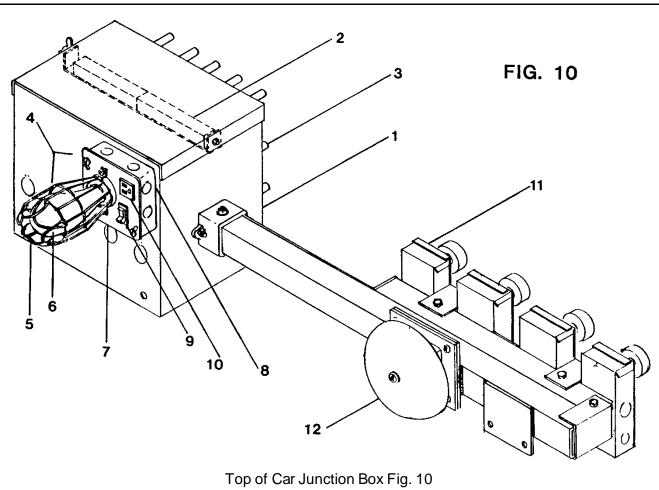

Top of Car Junction Box Fig. 10 Material lists 7003AM1 to 6 DWG 7003AM


REF. No.	PART No.	DESCRIPTION
1	309BH1	Junction Box
2	P303CD1	Terminal Blocks
3	F0177BP1	Switch, Magnet
4	7138A1	Light fixture Assembly with:
5	V384MJ1	Guard
6	6599D10	Lamp, Incandescent 100 W, 120 V
7	346AJW1	Cover
8	V309BB1	Box, 4 in. sq. 1-1/2 Deep
9	V177BG1	Switch, 15 Amps, 125V
10	V614W1	Receptacle, with Ground
11	A6098B36	Mechanical Switch, Double Pole, Double Throw
12	4 35-6C1-Bell-Edwards AAA311E1	Bell, 6 VDC, 25 Amps

January 11, 2012 Page 9




Inspection and Emergency

Stop Control Boxes

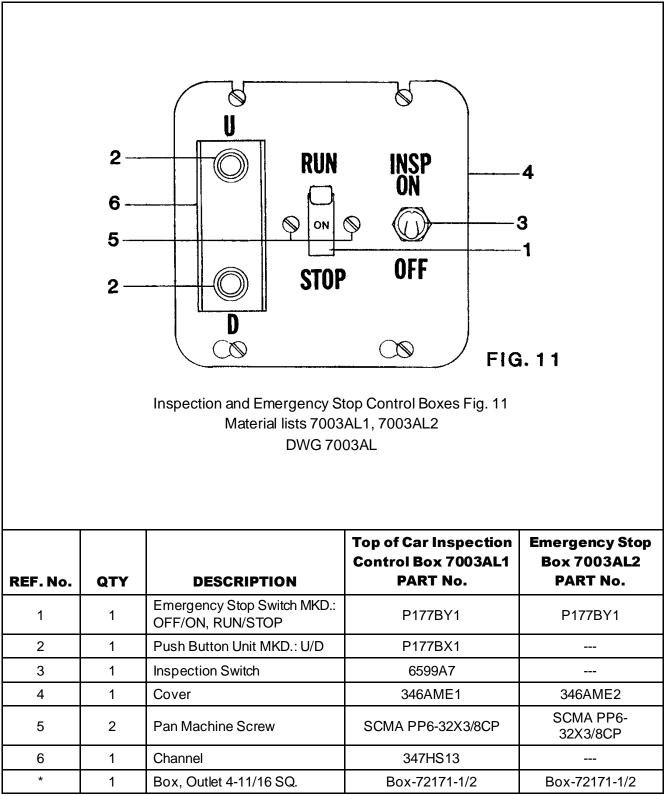

* Part not illustrated.


Page 10 | January 11, 2012

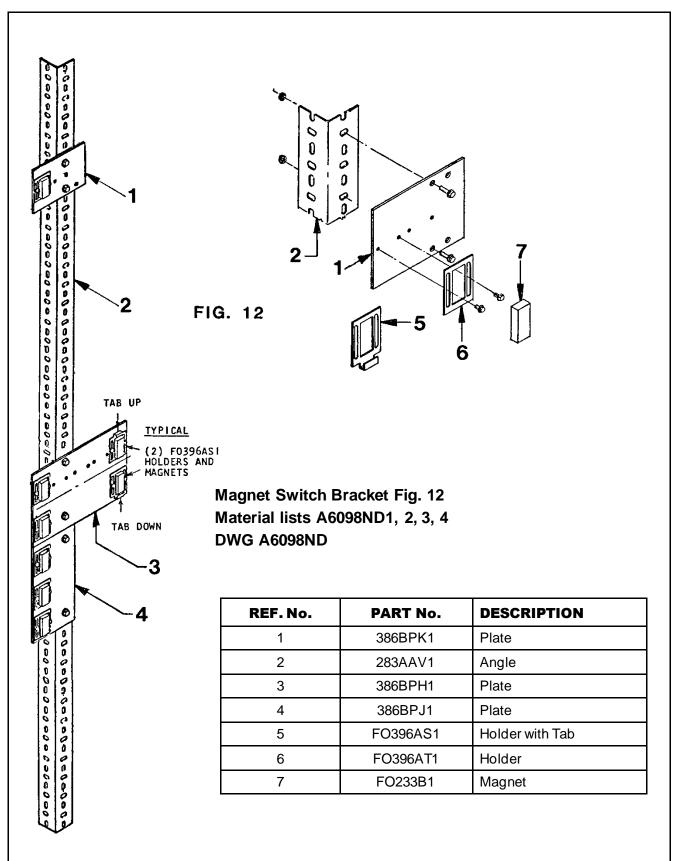

January 11, 2012 Page 11


C-3000

Guide Shoe Assembly

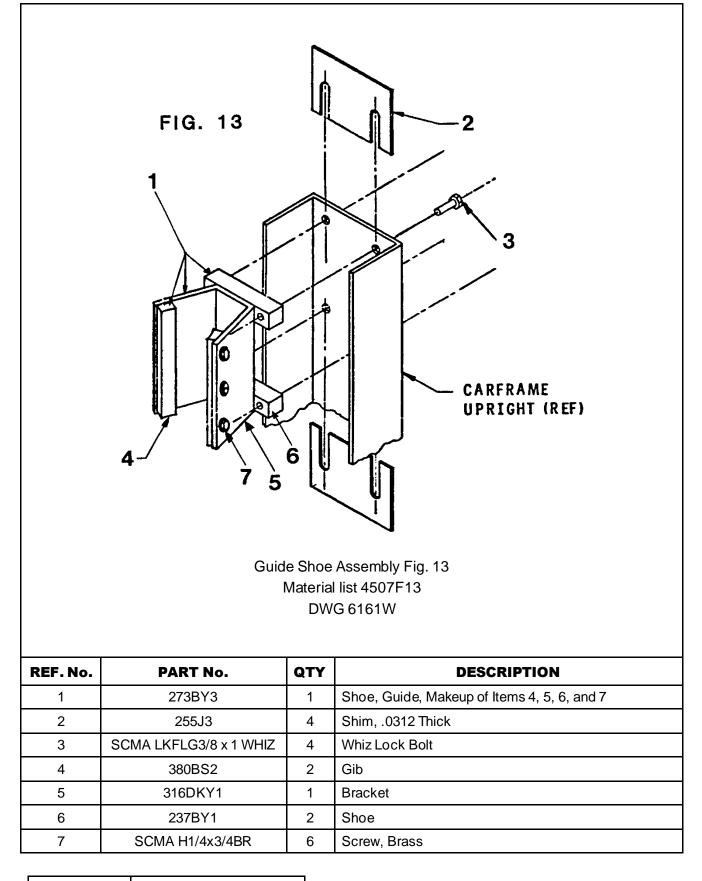

Page 12 | January 11, 2012

Type "MODL" Door Operator

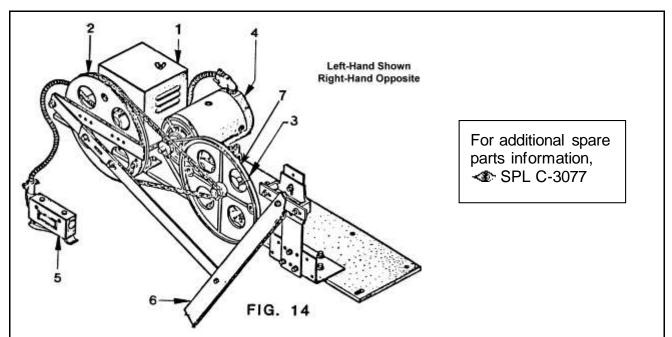


Type "MODL" Door Operator Fig. 14

REF. No.	ITEM No.	DESCRIPTION	Drawing No.
	1	MOD Operator Limit Control with:	
2		MOD Limit Switch	
1	2D	Bridging Cam Assemblies	OP-10
I	3	Activating Cam Set	0P-10
	4	Resistor Assembly	
	4A	Resistors, 300 Ohms, 100 Watt with Bands	
	5	MOD Drive Pulley with:	
	5A	Chain and U Bolts	
2	5B	Rubber Suppressor	OP-10
	5C	Bearing & Bearing Block	
	5D	MODL Stop Roller & Bracket	
	1	Intermediate Pulley with:	
	2	Intermediate Bearing Block	
3 3		Adjusting Stud	OP-20
	4	Adjusting Angle & Bolt	
		Chain Sprocket No. 35 with 15 Teeth, 3/8 Chain Pitch	
4		Motor, 1/6 HP, 220 VDC, Shunt Wound 1140 RPM	OP-1
	S₩-C-1 6098MV2	Gate Switch Complete, 🕓 , 🖑	
5	SW-1-3	Operating Cam Assembly	SW-1
SW-1-5		Contact Base Assembly	
	SW-1-6 Roller Arm Assembly		
*6	1	"L" Operator Door Drive Arm Assy. 🛷 NOTE	OP-22
7	AAA717J2	Belt, V, 45 in.	

NOTE: When ordering replacement parts, specify opening width and hand of operation.

January 11, 2012 | Page 13

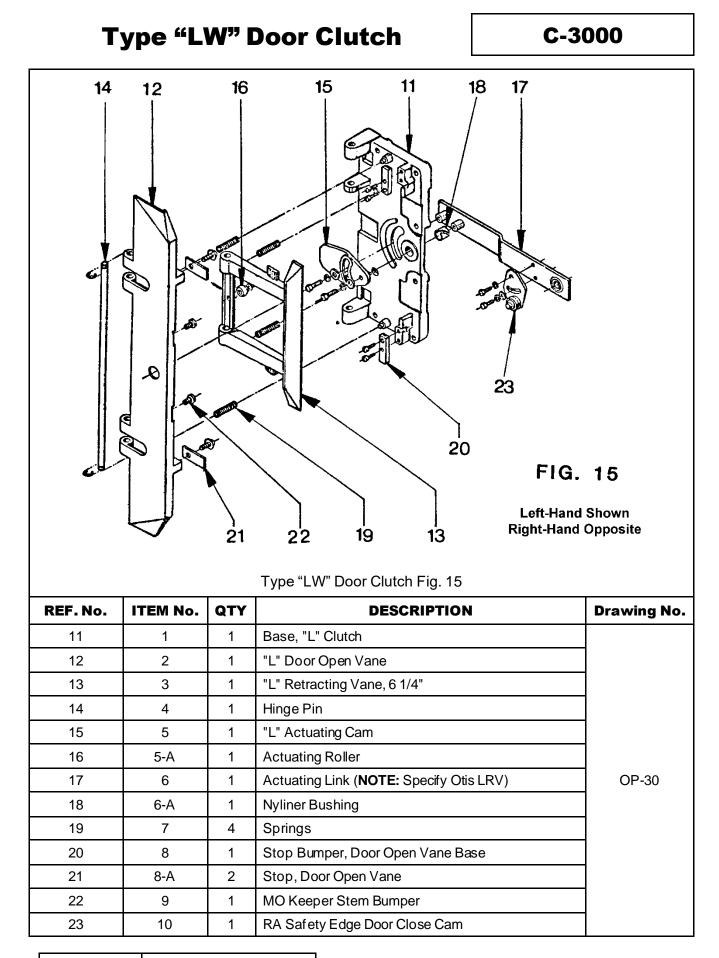

Page 14 | January 11, 2012


C-3000

Type MOH and MOCP Interlocks

Н	MOH and MO	info	additional p ormation, C-3078	
			APPLI	CATION
REF. No.	ITEM No.	DESCRIPTION	МО	МОСР
A	1	MO or MOCP Switch with:	Х	Х
A-1	3L	MO Contact Base and Insulator, Left Hand	Х	Х
A-2	3R	MO Contact Base and Insulator, Right Hand		X
_	-			
В	4	MO Keeper with:	X	X
B C		MO Keeper with: MO Keeper Bridging Block	X	X X
	4		X X	
С	4 5	MO Keeper Bridging Block		X
С	4 5 5	MO Keeper Bridging Block MO Keeper Bridging Block	 X	X
C C	4 5 5 6	MO Keeper Bridging Block MO Keeper Bridging Block MO Upper Link with:	 X X	x x
C C	4 5 5 6 13	MO Keeper Bridging Block MO Keeper Bridging Block MO Upper Link with: MOM Link Snap Pin	 X X X X	x x x
C C D	4 5 5 6 13 14	MO Keeper Bridging Block MO Keeper Bridging Block MO Upper Link with: MOM Link Snap Pin MOM Nyliner Bushing #4L-2FF	 X X X X X	X X X X X
C C D E	4 5 5 6 13 14 9	MO Keeper Bridging Block MO Keeper Bridging Block MO Upper Link with: MOM Link Snap Pin MOM Nyliner Bushing #4L-2FF MOH Release with:	 X X X X X X	x x x x x x x
C C D E F	4 5 5 6 13 14 9 10	MO Keeper Bridging Block MO Keeper Bridging Block MO Upper Link with: MOM Link Snap Pin MOM Nyliner Bushing #4L-2FF MOH Release with: MOM Roller and Shaft	 X X X X X X X X	X X X X X X X X
C C D E F G	4 5 5 6 13 14 9 10 11	MO Keeper Bridging Block MO Keeper Bridging Block MO Upper Link with: MOM Link Snap Pin MOM Nyliner Bushing #4L-2FF MOH Release with: MOM Roller and Shaft MOM Lower Link	 X X X X X X X X X	X X X X X X X X X
C C D E F G H	4 5 5 6 13 14 9 10 11 12	MO Keeper Bridging Block MO Keeper Bridging Block MO Upper Link with: MOM Link Snap Pin MOM Nyliner Bushing #4L-2FF MOH Release with: MOM Roller and Shaft MOM Lower Link MOM Release Rocker	 X X X X X X X X X X	X X X X X X X X X X X
C C D E F G H I	4 5 5 6 13 14 9 10 11 12 16	MO Keeper Bridging Block MO Keeper Bridging Block MO Upper Link with: MOM Link Snap Pin MOM Nyliner Bushing #4L-2FF MOH Release with: MOM Roller and Shaft MOM Lower Link MOM Lower Link MOM Release Rocker MO Lock Mounting Plate	 X X X X X X X X X X X	X X X X X X X X X X X X
C C D E F G H I J	4 5 5 6 13 14 9 10 11 12 16 17	MO Keeper Bridging Block MO Keeper Bridging Block MO Upper Link with: MOM Link Snap Pin MOM Nyliner Bushing #4L-2FF MOH Release with: MOM Roller and Shaft MOM Roller and Shaft MOM Lower Link MOM Release Rocker MO Lock Mounting Plate Emergency Release Bolt	 X X X X X X X X X X X	X X X X X X X X X X X X X X
C C D E F G H I J K	4 5 5 6 13 14 9 10 11 12 16 17 19	MO Keeper Bridging Block MO Keeper Bridging Block MO Upper Link with: MOM Link Snap Pin MOM Nyliner Bushing #4L-2FF MOH Release with: MOH Release with: MOM Roller and Shaft MOM Lower Link MOM Lower Link MOM Release Rocker MO Lock Mounting Plate Emergency Release Bolt MOCP Rocker Arm Assembly	 X X X X X X X X X X X X X X 	X X X X X X X X X X X X X X

January 11, 2012 Page 15

Hanger Roller Assembly

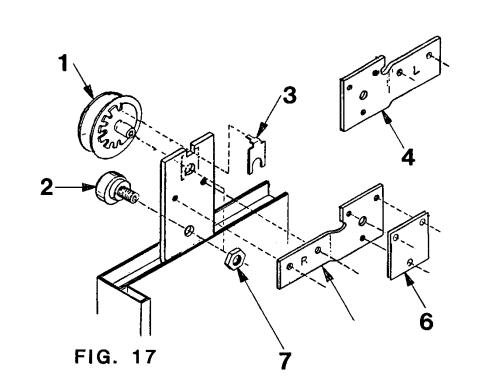


Hanger Roller Assembly Fig. 17

For additional parts information, < SPL C-3078

REF. No.	PART No.	QTY Single Slide	QTY Center Opening	DESCRIPTION
1	ER-1	2	4	Eccentric Roller
2	ER-2	2	4	Eccentric Upthrust Roller
3	LP-1	2	4	Eccentric Roller Lock Plate
4	KSL	1	1	GAL Keeper Adaptor, Left Hand
5	KSR	1		GAL Keeper Adaptor, Right Hand
6	KHS	3	6	GAL Keeper Hook Shim
7	JN	4	8	Jamb Nuts, 1/2X20


Type "A" Car Door Sheave Assembly

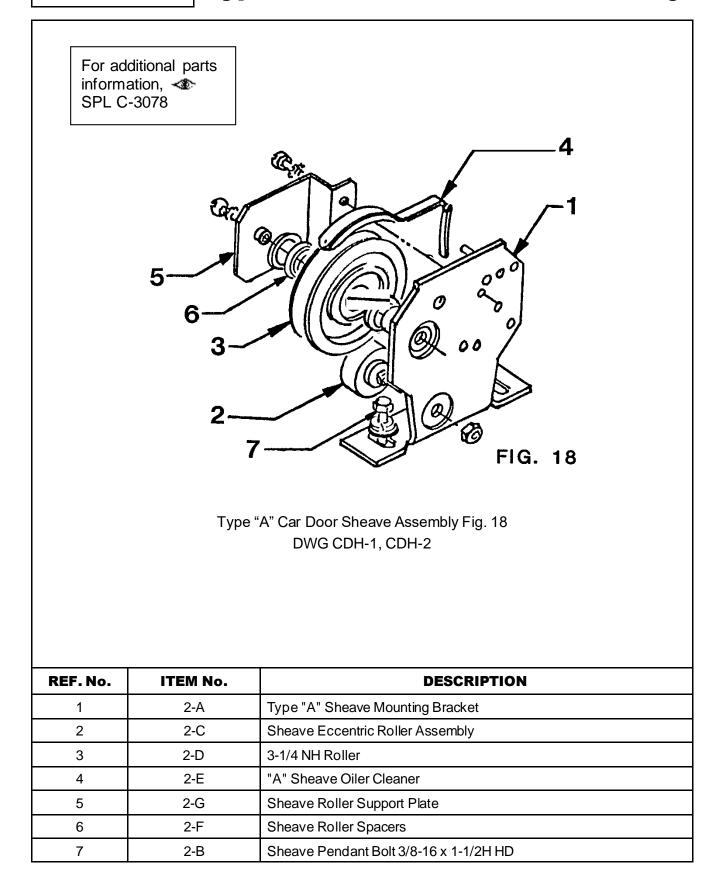


January 11, 2012 | Page 17

Car Operating Panel


C-3000

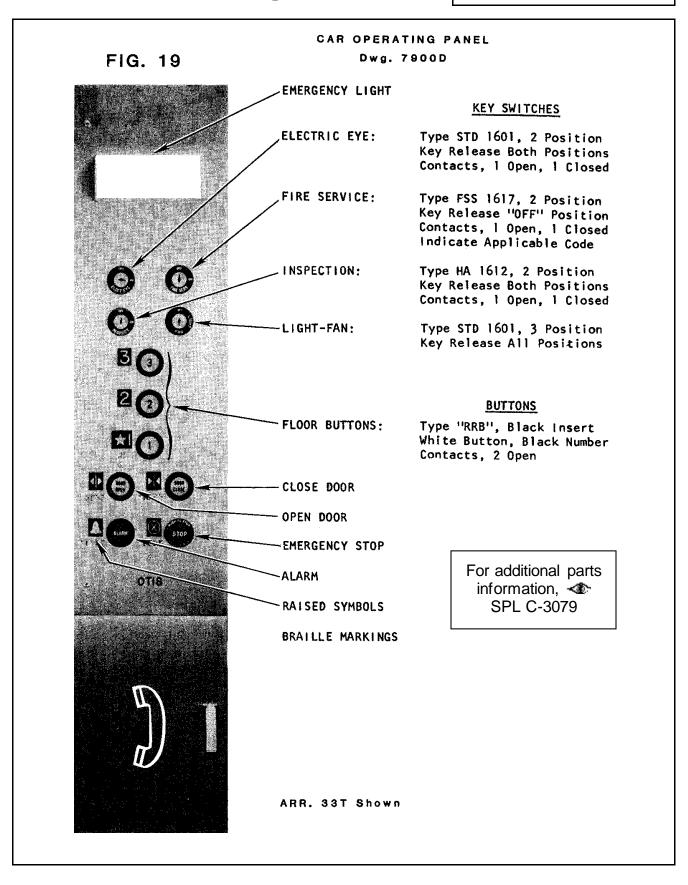


Page 18 | January 11, 2012

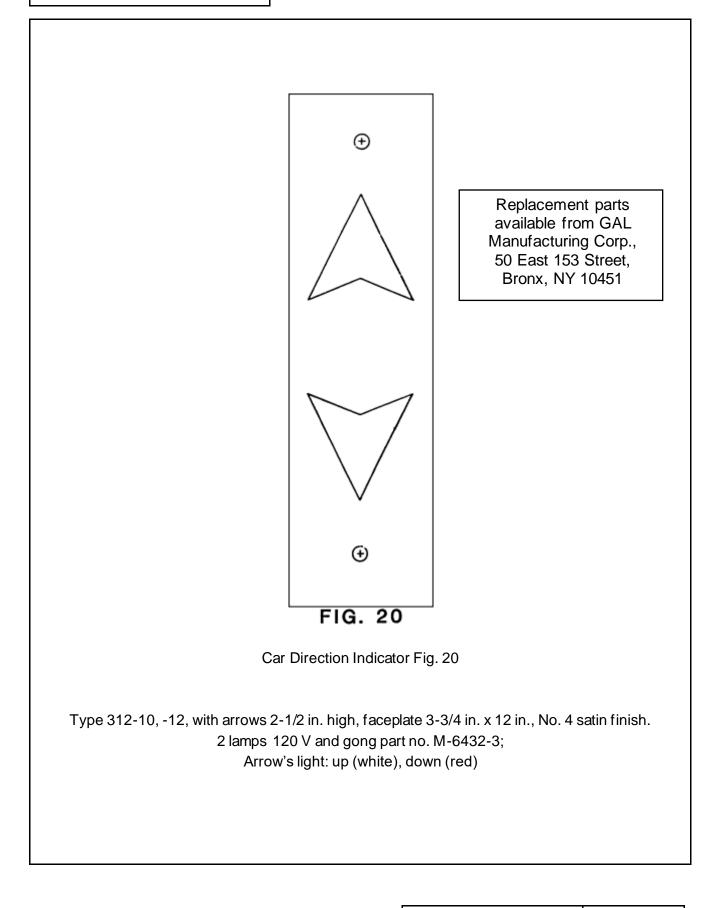

January 11, 2012 Page 19

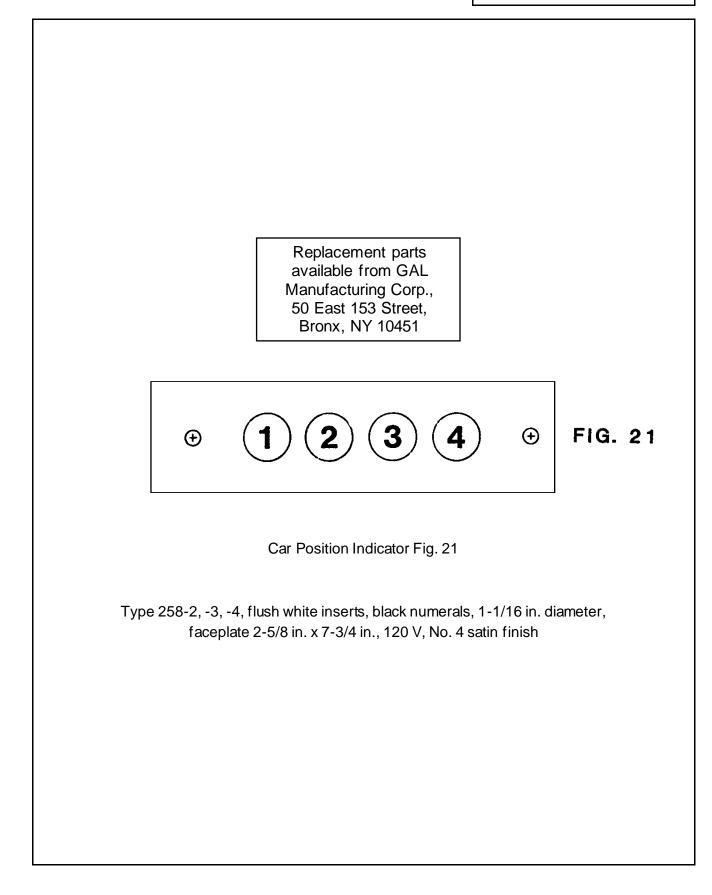

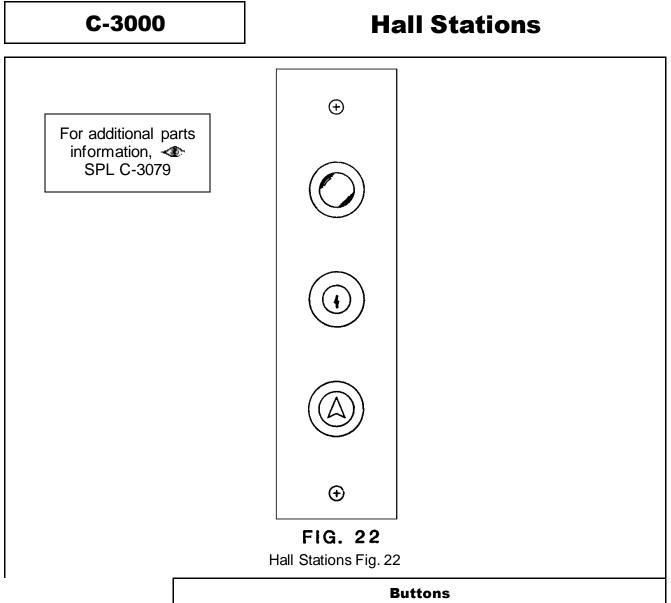


Floor/Arrow	Type RRB, Black Insert, White Button Black Marking, Contacts, 2 Open

	Keyswitches
Marked/Unmarked	Type 1613, 2 Position, Spring Return Key Release Both Positions, Contacts 2 Open, MKD.: OFF-ON/UP-DOWN
Hoistway Access	Type HA 1612, Spring Return, Key Release in "OFF" Position, Contacts 2 Open
Fire Service	Type FSS 1617, 3 Position, Key Release in OFF and ON Positions, MKD.: "FIRE SERV BYPASS-OFF-ON. Indicate Applicable Code.

	Faceplates
Туре 310	1 or 2 Modules, 3-3/8"X9-3/4"
Туре 314	3 Modules, 3-3/8"X14"
Туре 316	4 Modules, 3-3/8"X16"


Type "RAL" Safety Edge

C-3000

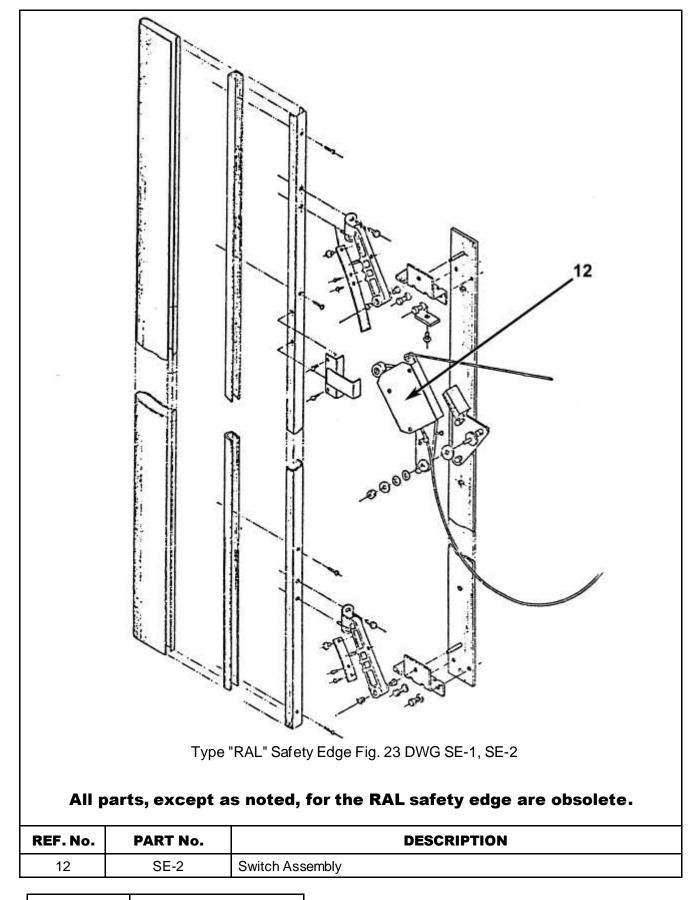

Page 22 | January 11, 2012

Type "RA" Safety Switch Assembly

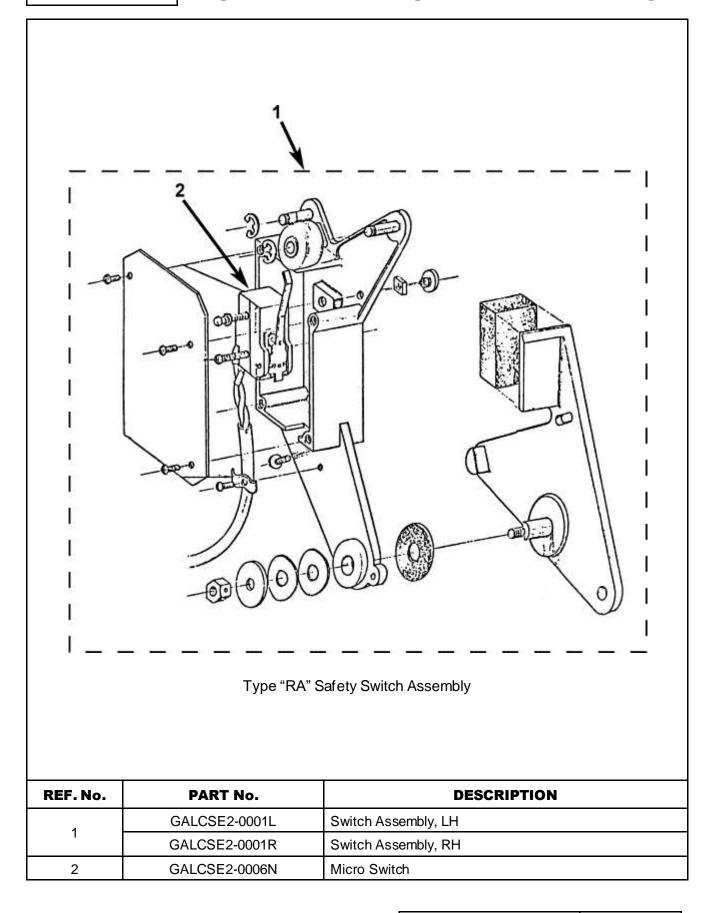

January 11, 2012 Page 23



